

WIRE SEAL SITE CONTROLLERS FOR WEIGHTS AND MEASURES

This instruction sheet details the steps required to wire-seal a site controller for Weights and Measures.

C06325 Kit Contents

C36063	Seal Standoffs, M/F #8-32, Qty. 2
069078	Seal Disc
069079	Seal wire, 44" long
C36062	Wire Seal Site Controllers For Weights And Measures Instruction Sheet (this sheet)

Installation Instructions

1. On the side of the Site Controller with the nameplates, remove the Phillips head screw closest to the vent holes and remove the diagonally-opposing screw from the other side of the Site Controller. These screws will not be re-used.
2. Using the two male/female standoffs from the kit, install where the two screws were removed from and tighten to re-secure the site controller cover to the base. Reuse any washers that may have been removed in Step 1.
3. Position seal-wire body on top of site controller cover and route seal wire through holes in standoffs and seal body as shown by arrows in diagram.
4. With the standoffs tight and seal wire taut (no slack), crimp body of seal to secure wires and trim off excess.

