

PC/TOPKAT VERSION 3.0.1.0 PATCH

The following instructions are for PC/TopKAT Version V3.0.1.0 Patch installation under Microsoft Windows.

1. Turn on your computer and start Microsoft Windows.
2. Insert the GASBOY PC/TopKAT V3.0.1.0 Patch CD-ROM into your CD ROM drive.
3. Click on the Start menu.
4. Click on **Run**.
5. Type **D:\Setup**. (On most computers, the CD-ROM drive is D. If your CD-ROM drive is not D, type the appropriate letter.)
6. Click on OK.
7. Follow the on-screen instructions for installation. Setup will search your hard drive for the PC/TopKAT program and copy the necessary files to your PC. If PC/TopKAT cannot be found, or if multiple copies are found, you will be given an opportunity to manually search for it. If you are unable to locate PC/TopKAT on your system, the patch will not be able to continue.

The following files have been updated:

File Name	Version	Date/Time
PCTopKAT.exe	3.0.1.0	3/5/2003 10:38AM
ResTKPass.exe	1.0.1.0	3/5/2003 11:43AM
GC32_TK.dll	1.2	11/3/2000 10:35AM
SecurityCheck.dll	2.0.1.0	3/12/2003 8:51AM
Topkat.hlp	1.0	10/10/2001 4:26PM
PCTOPKAT_UserGuide.pdf	03/07/03	3/7/2003 11:00AM
GSBPrv.exe (GSBPreviewer.exe)	1.0.0.3	3/12/2003 2:35PM

This patch disk can be used to update PC/TopKAT from versions 3.0.0.0, 3.0.0.1 and 3.0.0.2.