

## INSTRUCTIONS TO DISABLE PIN CHECKING FOR CFN NETWORK

To disable PIN checking for the **READER** and the **CONSOLE** for CFN Network sites below version 4.2, set the following parameters as follows:

### CFN II or CFN3 V3.3 and below

#### READER, SYS\_PAR, Page 4

37. Check PIN (reader): **none** (*0=none*)

#### CONSOLE, SYS\_PAR, Page 5

54. Check PIN (console): **none** (*0=none*)

### CFN3 V3.4 and above

#### READER, SYS\_PAR, Page 4

38. Check PIN (reader): **none** (*0=none*)

#### CONSOLE, SYS\_PAR, Page 5

57. Check PIN (console): **none** (*0=none*)